



INSTALLATION GUIDELINE



Roof Mounting System NOVA ADJUSTABLE A-FRAME 15-30°

PART #TRB-AFK-A4S-RCN











LANDSCAPE





CONTENT

1. INTRODUCTION	
2. GENERAL	1
LIABILITY	
INSTALLATION GUIDELINES	
TESTING & CERTIFICATION	
MAINTENANCE	
DISASSEMBLY & DISPOSAL	
WARRANTY	
3. SAFETY GUIDELINE	
PERSONNEL & SUPERVISION	
WORKSITE SAFETY	
MANDATORY SAFETY CHECKS	
GENERAL RESPONSIBILITY & SAFETY GUIDELINE	
4. SYSTEM OVERVIEW	3
PARTS LIST	4
ACCESSORIES LIST	5
5. INSTALLATION PREPARATION	6
TOOL LIST	
MEASURE THE SOLAR MODULES	
PORTRAIT SET UP	
6. INSTALLATION GUIDELINE	
NOVA A-FRAME	
NOVA STANDING SEAM CLAMP	
INSTALLING THE A-FRAME ONTO THE KLIPLOK ROOF	
INSTALLING THE A-FRAME ONTO THE STEEL ROOF	
JOINING RAILS	
MOUNTING THE RAIL TO THE RAIL CLAMP	
ARRAY LAYOUT	
NOVA CABLE MANAGEMENT CLIP	
NOVA MICROINVERTER/ OPTIMISER MOUNTING NUT	
NOVA MICROINVERTER EARTH LUG	
EARTHING SOLAR ARRAY	
NOVA MODULE CLAMPS	
INSTALLING THE NOVA MODULE CLAMPS	22
FIRST SOLAR MODULE PLACEMENT AND F <mark>IXING</mark>	23
INSTALLING THE INNER CLAMPS ONTO THE MOUNTING RAILS	24
SECOND SOLAR MODULE PLACEMENT AND FIXING	25
INSTALLING THE LAST SOLAR MODULE OF THE ROW	
INSTALLING THE NOVA END CAPS	
SOLAR MODULE INSTALLATION COMPLETED	28
7 NOTE	20



1. INTRODUCTION

Welcome to the NOVA Solar Mounting Solution Installation Guildeline. This guide is your comprehensive resource for installing NOVA's solar mounting systems. Designed with precision and engineered for durability, our systems ensure a seamless and efficient installation experience.

Whether you're working with penetrative tin roofs, tile roofs, or other specialised surfaces, this guildeline provides step-bystep instructions and all the necessary details to ensure a successful and long-lasting solar installation.

2. GENERAL

This installation guideline outlines the correct procedure for assembling the NOVA Roof Mounting System and must be followed precisely. Before beginning installation, please read this guildeline carefully to ensure full understanding of the process and associated safety requirements. Compliance with all safety precautions, handling guidelines, and the procedures outlined in this guildeline is essential for a safe and successful installation.

In addition to this guildeline, refer to any project-specific layout drawings, engineering reports, or planning documents provided by NOVA Mounting. These documents contain important technical data and site-specific instructions that must be adhered to throughout the installation process.

Please note that the illustrations and diagrams within this guildeline are provided for general guidance and may differ slightly from actual system configurations depending on roof type, region, or project requirements.

LIABILITY

All technical content and guidance contained in this guildeline is developed using current standards, regulations, and NOVA Mounting's expertise in solar mounting systems. While every effort has been made to ensure accuracy, final responsibility lies with the installer to verify compliance with local codes, structural suitability, and safe work practices. Refer to our official warranty and liability conditions available at www.novamounting.com

INSTALLATION GUIDELINES

Ensure that the roof construction is suitable for the introduction of forces at the fixing points and their subsequent transmission. In order to compensate thermal expansion, include a break every 25 meters when planning the PV-system. For module positioning/fastening points please refer to manufacturers recommendations. Please follow your local timber construction standard. Please do not use installed roof connections as ladder. If installation is located within 10km from the coast, we advice not to use zinc coated material. For further information please contact your sales representative or the technical department at NOVA Mounting.

TESTING & CERTIFICATION

All components have been tested and developed to be compliant with relevant guides and regulations.

MAINTENANCE

To ensure the long-term safety, performance, and structural integrity of the NOVA Roof Mounting System, periodic inspections and maintenance are required. All maintenance activities must be carried out by qualified personnel familiar with the system and local safety standards.

- Perform a general system inspection annually. Additional inspections should be conducted after severe weather events, such as storms with wind speeds exceeding 75 km/h or heavy hail.
- Inspect all screw connections and tighten any that are loose, following the specified torque values provided in the installation instructions
- Any damaged, corroded, or loose components must be repaired or replaced immediately.

DISASSEMBLY & DISPOSAL

Reused components are classified as wearing parts, and responsibility for assessing wear rests with the installer. NOVA disclaims any liability or warranty for reused components. Disassembled parts should be properly recycled, with metals and plastics sent for recycling, and other materials disposed of according to their composition.

WARRANTY

Warranty according to the terms and conditions found on the website www.novamounting.com
NOVA is not accountable for the roof's capability to maintain the introduced forces. Please check the roof's compatibility with a static engineer.



3. SAFETY GUIDELINE

Before commencing installation, ensure the mounting surface is structurally sound and suitable for the applied loads of the solar array. All installations must be performed in accordance with the system design, local building codes, and relevant Australian Standards. Carefully plan the panel layout to accommodate thermal expansion—introducing expansion joints every 25 metres is recommended. Always follow the solar panel manufacturer's guidelines regarding clamping zones and attachment points. Do not use mounting components as footholds or for temporary access. Ensure the roof surface is clean, dry, and free of debris before beginning work. If in doubt, consult a structural engineer or contact NOVA Mounting's technical support for project-specific guidance.

PERSONNEL & SUPERVISION

- Installation must be carried out by qualified and trained personnel, with a minimum of two professionals present at all times
- All installers must be familiar with this guildeline and local safety standards before beginning work.

WORKSITE SAFETY

- · Never install the mounting system in high winds, wet conditions, or on slippery or uneven roof surfaces.
- Keep the roof clean and dry. Remove any algae, debris, or obstacles before beginning installation.
- Do not walk on the mounting system or solar panels at any time.
- Never stand in gutters or areas not designed to support weight.
- If working on tiled roofs, slide tiles upward to create footholds—do not damage tiles or roof structure.

MANDATORY SAFETY CHECKS

- Do not alter or substitute system components.
- Ensure all fasteners are tightened to the recommended torque (12–14 N.m).
- Double-check all fixings before finalising installation.

GENERAL RESPONSIBILITY & SAFETY GUIDELINE

Ladders & Access Equipment: Place ladders on stable, solid surfaces. Maintain a ladder angle of approximately 75°, and ensure it extends at least 1 metre above the roof edge. Where possible, secure the ladder at the top using a rope or tension strap.

Handling and Modification: Do not throw or roughly handle any components. Avoid bringing the system into contact with sharp or heavy objects. Do not modify components in any way, including exchanging bolts, drilling holes, or bending parts. Any such modifications not described in the standard installation procedure will void the warranty.

Roof Inspection: Before installation, verify the roof's load-bearing capacity. Check that the roof is in good condition and can support the weight of the solar panels, including additional materials and loads.

Weather Conditions: Avoid installation in adverse weather conditions, such as strong winds or wet, slippery surfaces.

Safety Measures: Follow all fire regulations related to photovoltaic installations. Ensure the roof surface is clean, dry, and free of debris before beginning installation. Use safety nets and edge protection as necessary.

Earthing and Bonding: Perform equipotential bonding, grounding, and earthing according to country-specific standards and regulations. Galvanising of all earthing components if required.

Protective Gear: Wear appropriate protective equipment such as helmets, gloves, and non-slip safety boots.

















4. SYSTEM OVERVIEW

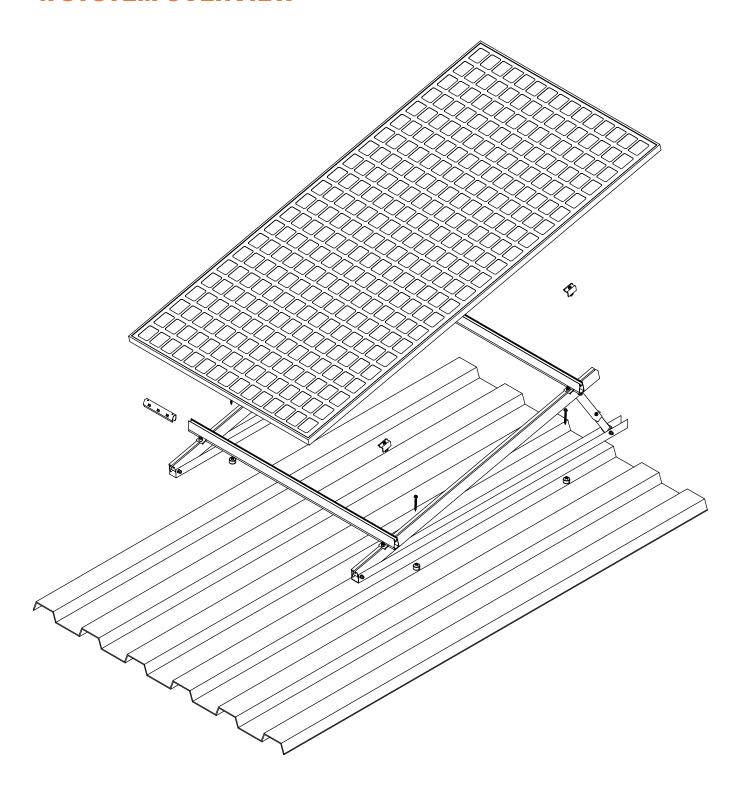




PARTS LIST



 


 
PART NAME: NOVA INNER RAIL JOINER PART NO.: NOVA-SK-NOV






 PART NAME: NOVA INNER RAIL JOINER PART NO.: NOVA-SK-NOU

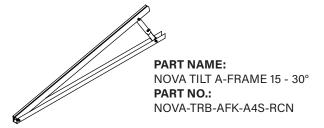



 
PART NAME: NOVA INNER CLAMP PART NO.: NOVA-PC-NIC35A-NS6




PART NAME: NOVA END CLAMP PART NO.: NOVA-PC-NEC40-NS6



 
ACCESSORIES LIST



 PART NAME: EARTH LUG PART NO.: NOVA-AC-ELG03




PART NAME:
MICROINVERTER MOUNTING NUT
PART NO.:
NOVA-AC-NRN

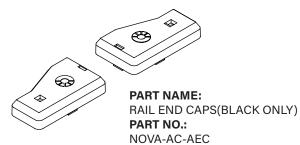





 PART NAME:
RAIL CABLE MANAGEMENT CLIP
PART NO.:
NOVA-AC-PCC08



PART NAME: STAND SEAM CLAMP PART NO.: NOVA-TRB-C___





5. INSTALLATION PREPARATION

TOOL LIST



MEASURE THE SOLAR MODULES

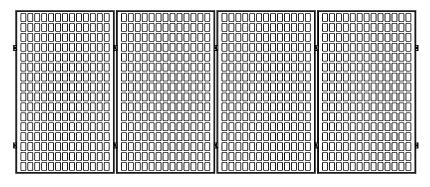

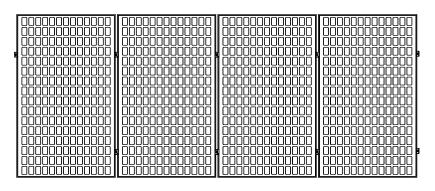


- Take the dimensions of the array field from the planning documents.
- Determine module size.
- Check the position of the purlins/rafters.
- Determine and mark positions of A-Frames.
- (i) Please ensure to follow all relevant standards and guidelines including, but not limited by, wind region, terrain category, off purlin requirements, roof zoning and building structural capacity. Please request relevant certifications from your local NOVA distributor.

6



PORTRAIT SET UP

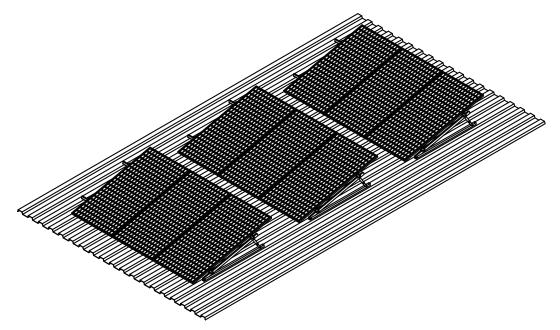


- Take the dimensions of the array field from the planning documents.
- Determine module size.
- Check the position of the purlins/rafters.
- Determine and mark positions of A-Frames.
- *i* Please ensure you follow all module manufacturer requirements for clamping zones etc, along with local relevant standards and guidelines for installation.




6. INSTALLATION GUIDELINE

NOVA A-FRAME

 NOVA-TRB-AFK-A4S-RCN

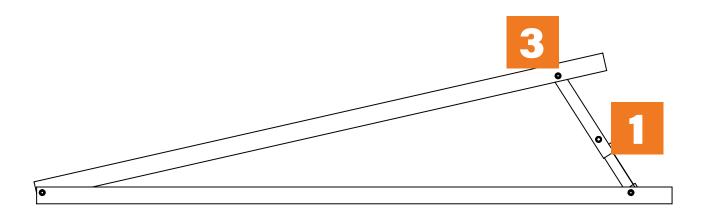



1. PART NAME: ADJUSTABLE TILT ANGLE

2. PART NAME: MULTI MOUNTING HOLES


3. PART NAME: M8 BOLT

i Note EPDM rubber is required for use on penetrative roofs for water ingress and dissimilar metal protection.



NOVA STANDING SEAM CLAMP

NOVA-TRB-C12

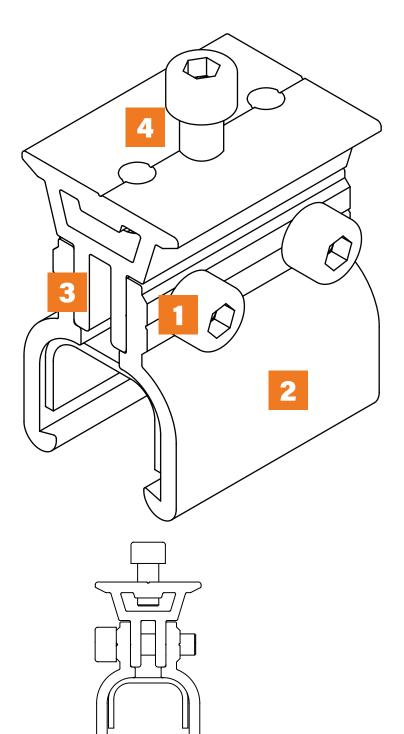

The following installation steps are applicable only to Standing Seam Clamp NOVA-TRB-C12. This clamp is specifically designed for universal compatibility with both KLIPLOK 700 and KLIPLOK 406 roof profiles.

NOVA-TRB-C12


The NOVA Standing Seam clamp can be universally applied to Kliplok 700 or Kliplok 406, by removing the 2 M8 bolts and installing the front clamping plate (2) on the outside for 700 or the inside for 406. Please see below.

1. PART NAME: M8 LOCKING BOLTS

2. PART NAME: CLAMPING PLATE

3. PART NAME: KLIPLOK 406 SLOT

4. PART NAME: MOUNTING PLATE AND BOLT

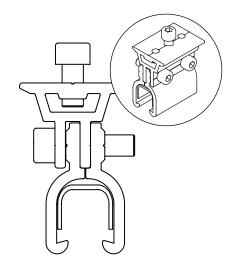

Kliplok 700


The kliplok 700 is designed to be installed on sheets that have a Klip lok 700 roof profile. Multiple roof sheets share this so it is best to determine the size prior to commencing work.

Kliplok 406

The kliplok 406 is designed to be installed on sheets that have a Kliplok 406 roof profile. Multiple roof sheets share this so it is best to determine the size prior to commencing work.




INSTALLING THE A-FRAME ONTO THE KLIPLOK ROOF

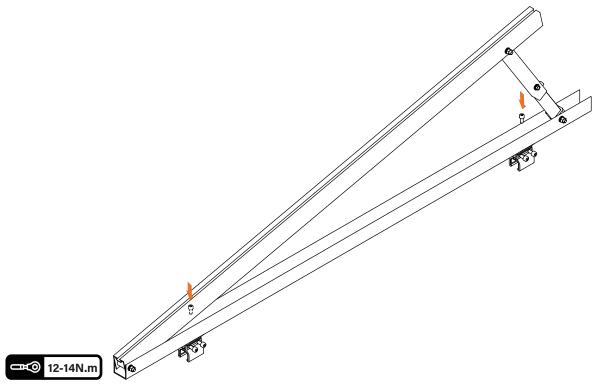

STEP 1

Remove the EPDM rubber foot and M8 bolt from the standing seam clamp prior to installing to the roof sheet. Place the A-Frame according to the direction required for your installation and tighten to the required torque (12-14N.m).

TIP: To save time calculate the amount of feet required and preassemble all the feet prior to installation.

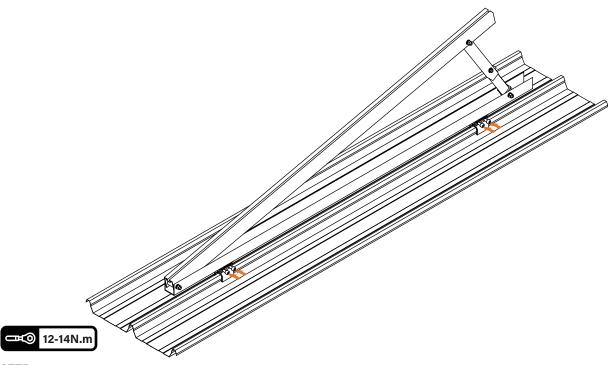

STEP 2

Loosen the M8 locking bolts and install the bracket over the lip of the roof sheet. Tighten the bolts to the required torque (12-14N.m).


TIP: Ensure to double check the first bolt you tightened after tightening the second to ensure movement of the clamping plate didn't cause the bolt to loosen.


i Please ensure to follow relevant guidelines for on/off purlin installation. If unsure please ask your local NOVA representative.

10




INSTALLING THE A-FRAME ONTO THE STEEL ROOF

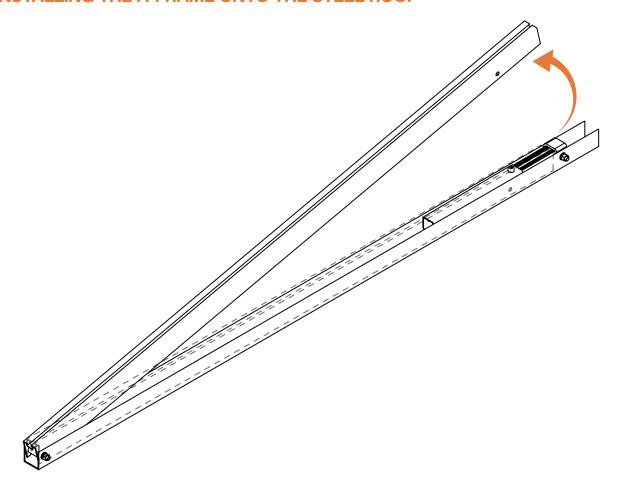

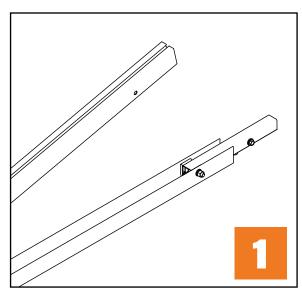


STEP 1 If required remove the existing screw from the roof sheet, or pre drill a pilot hole if necessary. Ensure cyclone washer (if required) and EPDM rubber are in place.

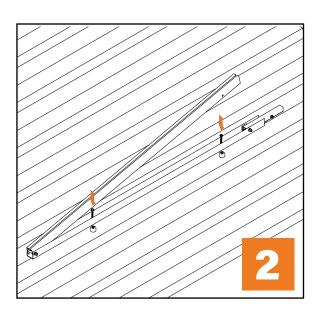


STEP 2Tighten the roof screw through the hole and EPDM rubber.




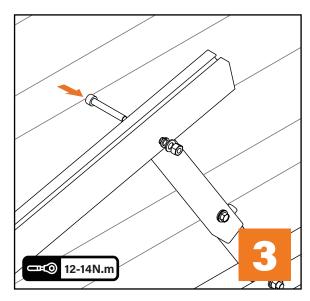

STEP 3
Secure the top of the A-Frame to the adjustable upright using the provided M8 bolt. Tighten to the specified torque of 12–14 N.m.

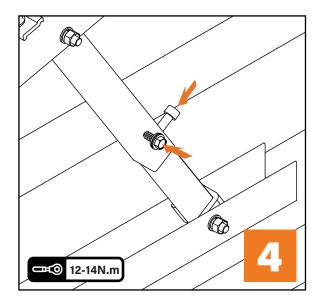

STEP 4Adjust the A-Frame to the desired tilt angle and tighten the M8 bolt to hold it in place. Once the angle is confirmed, secure the position permanently using the self-tapping screw.

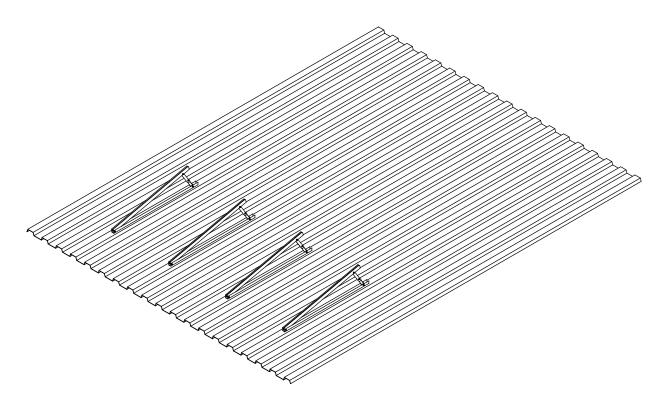


Ensure that all the A-Frame kits are aligned. Ensure the correct spacing of each A-Frame kit in accordance with design specifications.

(i)

If screws are overtightened water ingress protection cannot be guaranteed and damaged components should be replaced.




MEASURING & CUTTING RAILS

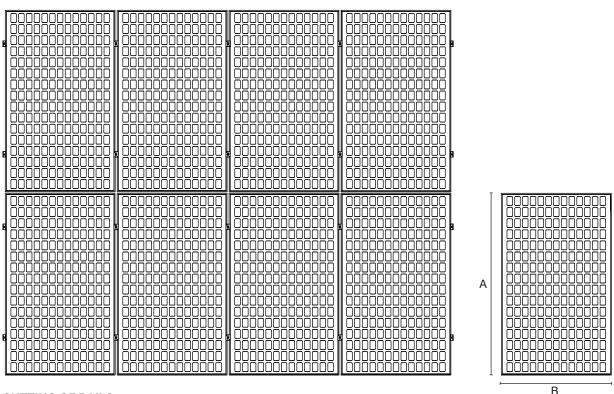

CUTTING OF RAILS

Measure and cut the rail length using one of the following methods:

- Use the formula: (B + 20) × Number of modules + 20 + 70
- Alternatively: (Width of panel + Width of mid clamp) × Number of modules + Width of end clamp + (35 mm overhang × 2)
- If the rail is running parallel to the long edge of the panel, use the length of the panel as the rail length.

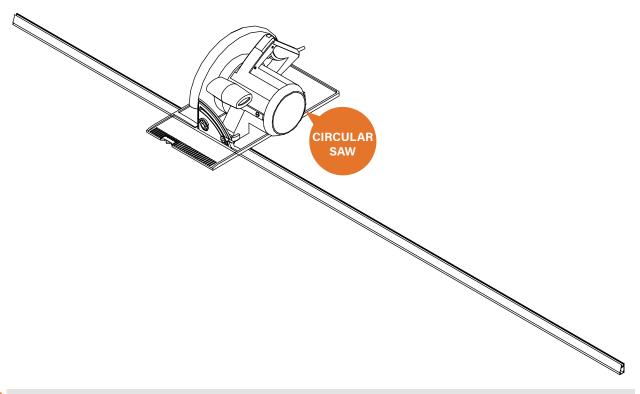



(i)


Cut using an aluminium circular saw blade for best results.



JOINING RAILS

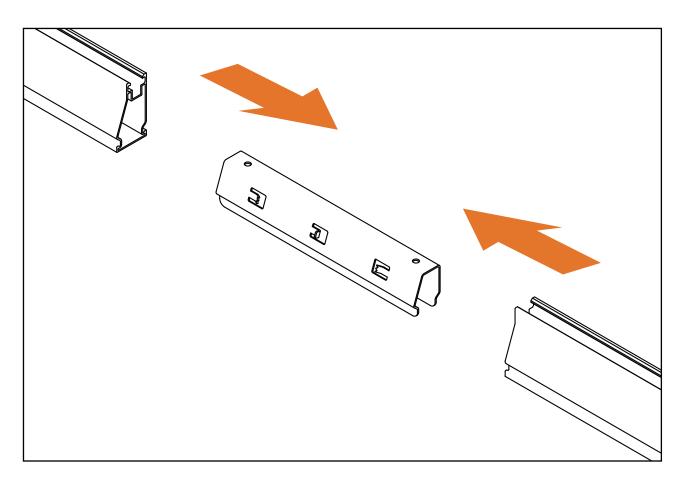

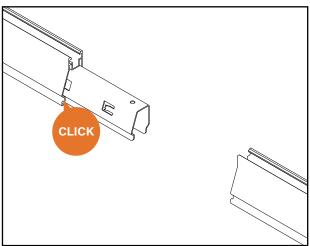

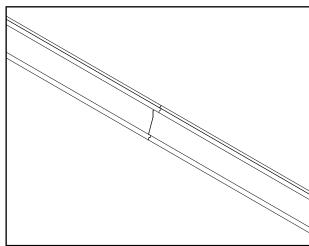

STEP 1 Take one piece of ra

Take one piece of rail and slide the joiner in until it stops. The joiner has a built-in stop feature to prevent over-insertion.

STEP 2

Slide the second rail onto the joiner until it is firmly seated against the stop. Repeat as needed until the full rail length is assembled.


i

The joiner contains an earthing connector that creates electrical continuity between the rails eliminating the requirement to run a continuous bonding.

The joiner can be removed with pulling force. If removed, inspect the locking teeth. If they are deformed, carefully bend them back into position before reuse. If damaged, discard and replace with a new joiner.



MOUNTING THE RAIL TO THE RAIL CLAMP

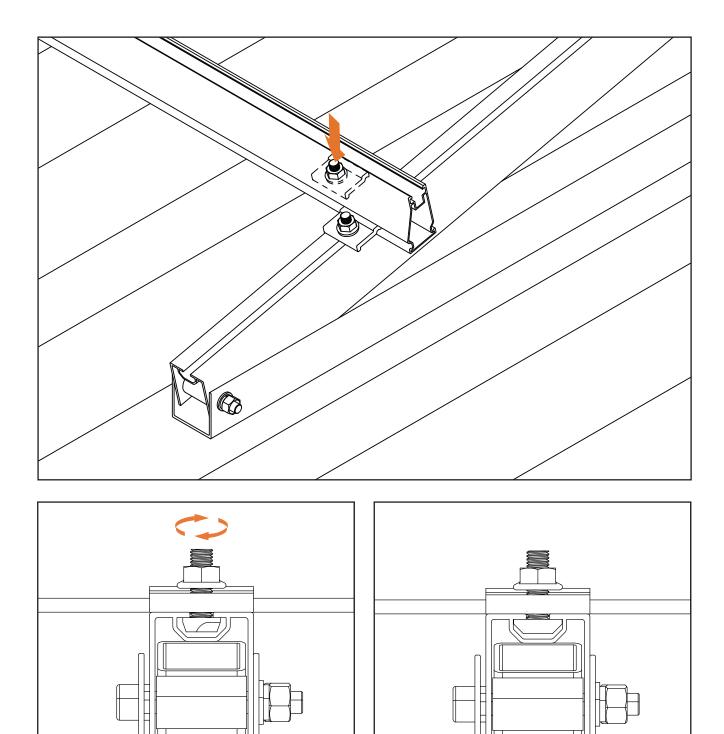

Place the rail on top of the A-Frame and secure it using the rail clamps. Insert each clamp into the A-Frame channel and tighten the nut to fix the rail in place.


NOVA INNER CLAMP

(i) Ensure the T-bolt is properly engaged and locked into position within the A-Frame channel before tightening.

NOVA END CLAMP



ARRAY LAYOUT

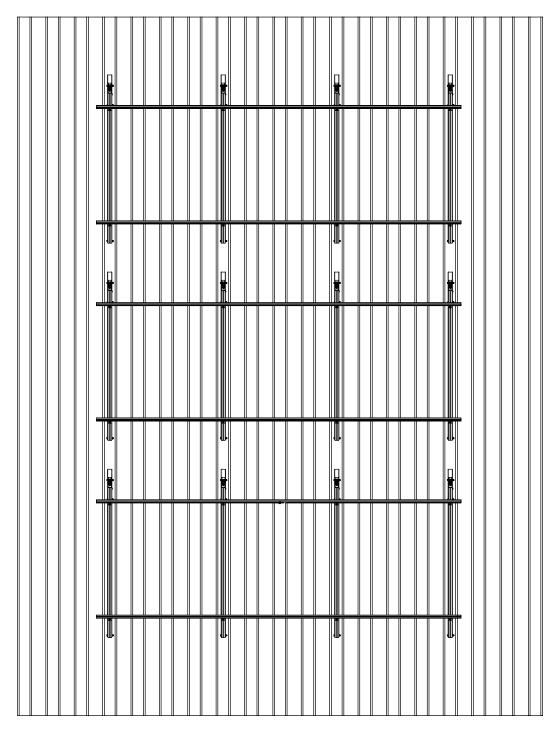



For best aesthetics, it is recommended to use a string line to level the rail and compensate for any irregularities in the roof.

i Note this step is not a requirement but does represent best practice.



NOVA CABLE MANAGEMENT CLIP

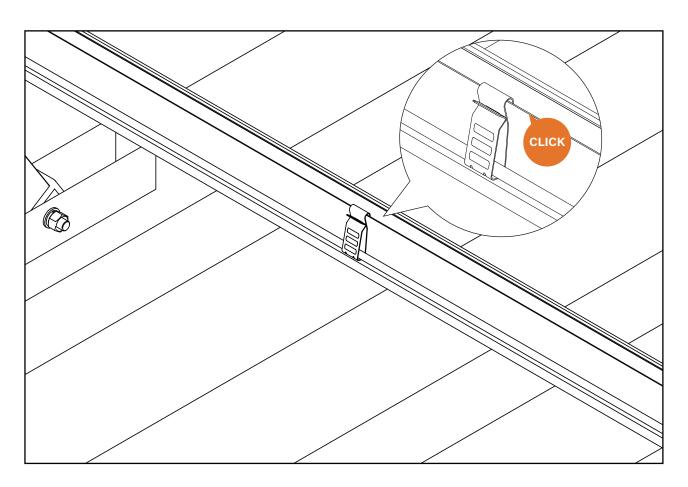

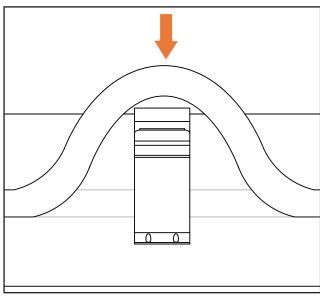

As an alternative to traditional cable management NOVA cable management clips can be utilised to improve efficiency.

STEP 1

Insert clip onto angled side of rail.


STEP 2


Insert up to 4 DC 6mm cables into clip.

i Ensure sufficient distance is maintained between clips to reduce cable sag.




NOVA MICROINVERTER/ OPTIMISER MOUNTING NUT

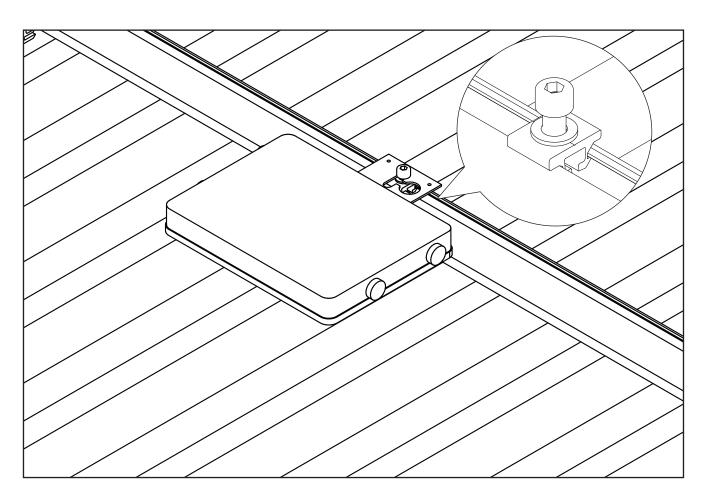

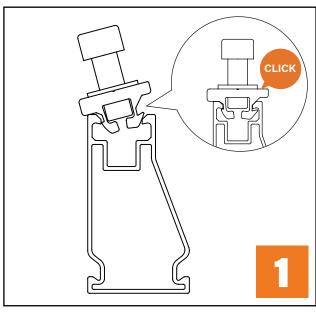


STEP 1With the bolt installed, click the microinverter/optimiser nut in place.

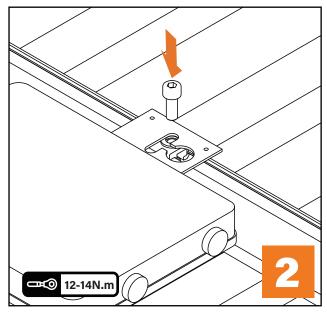


STEP 2
Remove the bolt if necessary and place through microinverter/optimiser mounting plate, tighten to correct torque (12-14 N.m).




NOVA MICROINVERTER EARTH LUG

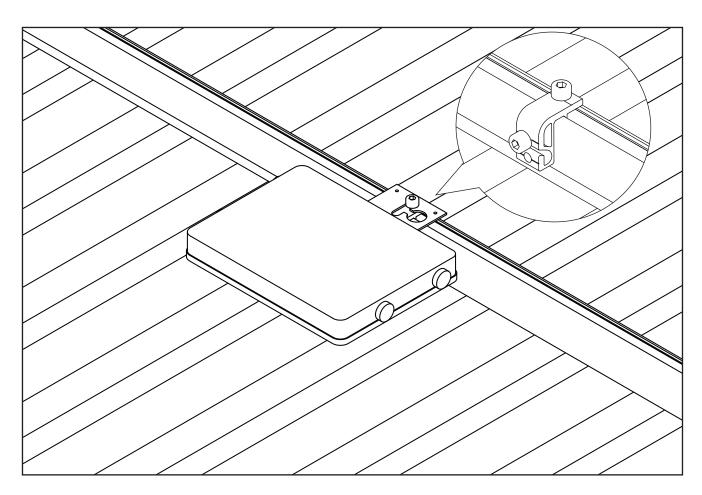

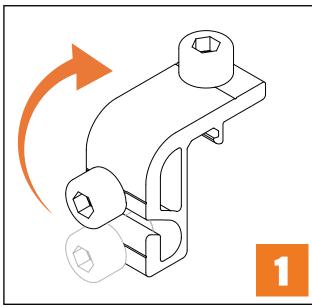

Remove the bottom bolt from the terminal section of the lug. Mount the earth lug onto the side of the rail.

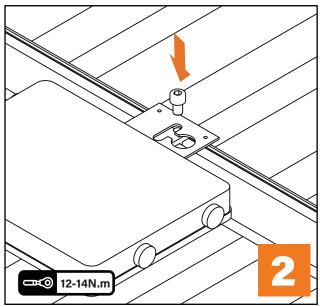



Mount the microinverter or optimiser to the lug using the top hole, and tighten to the recommended torque (12-14 N.m).

(i) Note the earth lug should be positioned on the flat side of the rail. If required use of a washer is permitted.



EARTHING SOLAR ARRAY

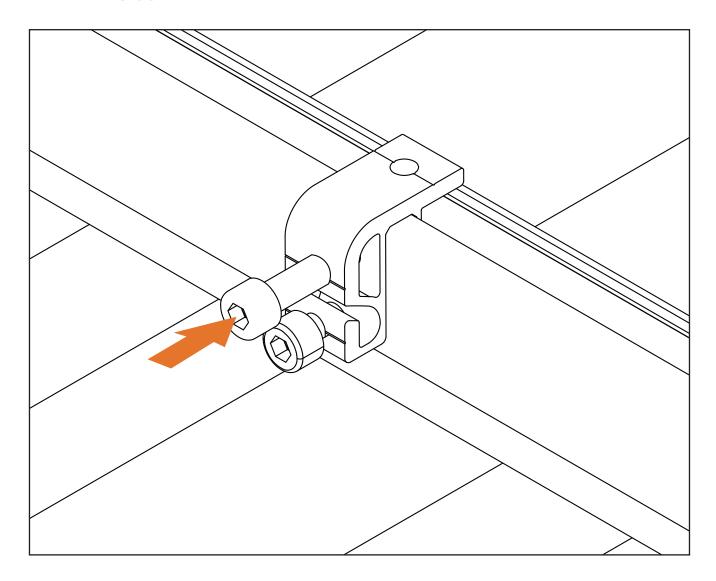

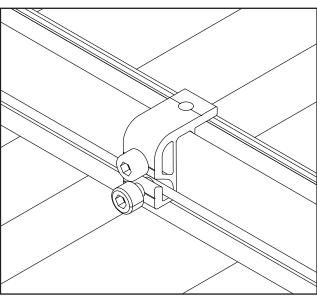

STEP 1

Mount the earth lug to the flat side of the rail tightening the top bolt to the recommended torque (12-14N.m).


STEP 2


Strip and connect the cable into the terminal point on the bottom of the lug. Ensure overtightening does not damage cable.


(i) Using bootlace ferrules on flex cables is recommended to prevent damage. Applying cold galvanizing spray is also advised. Always follow all relevant local rules and guidelines.



NOVA MODULE CLAMPS

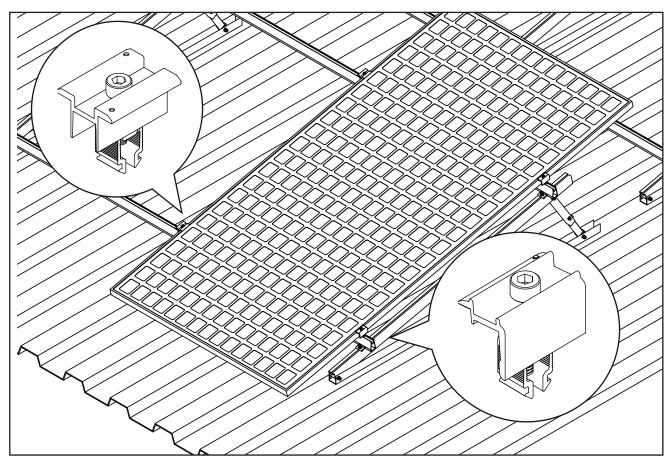

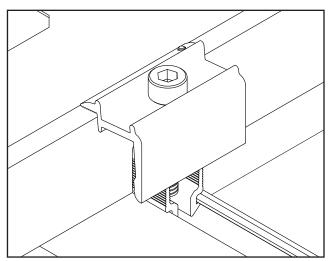

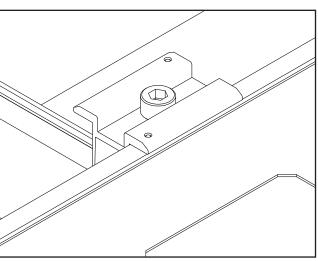

NOVA END CLAMP

NOVA INNER CLAMP


NOVA provides 2 types of clamps for connecting the modules to the rails. The end clamp is designed to start and finish the row of modules. The inner clamp is designed for the interconnection of modules.

(i)


Note: Mill finish components include built-in earthing pins. Black anodized components may feature either built-in pins or a preassembled earthing washer, depending on the region. Always refer to local standards and guidelines for earthing requirements.




INSTALLING THE NOVA MODULE CLAMPS

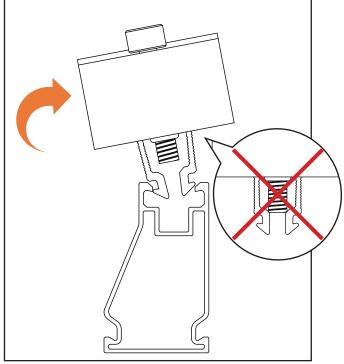


Ensure the bolt is loosen before installation to allow the clamp to properly clip into the rail. Failure to do so may obstruct insertion and risk damaging the rail. Refer to the diagram for correct positioning.

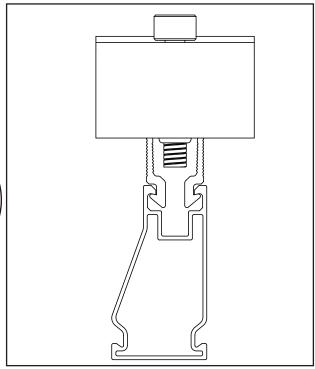

When installed correctly the bracket of the clamp shall be freestanding and tight inside the rail.

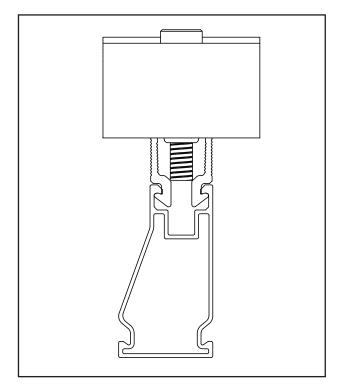

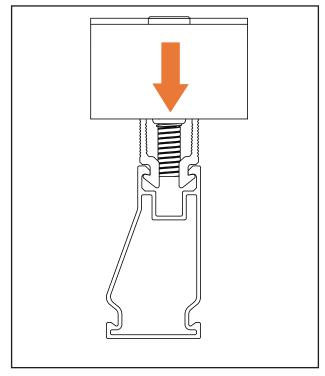



When clamp is tightened it is expected to drive down through the lower section of the clamp, this pushes the clamp out and creates the pressure required to hold the clamp in position.

(i) You may see some stripping of the thread of the bolt. This is to be expected.




FIRST SOLAR MODULE PLACEMENT AND FIXING

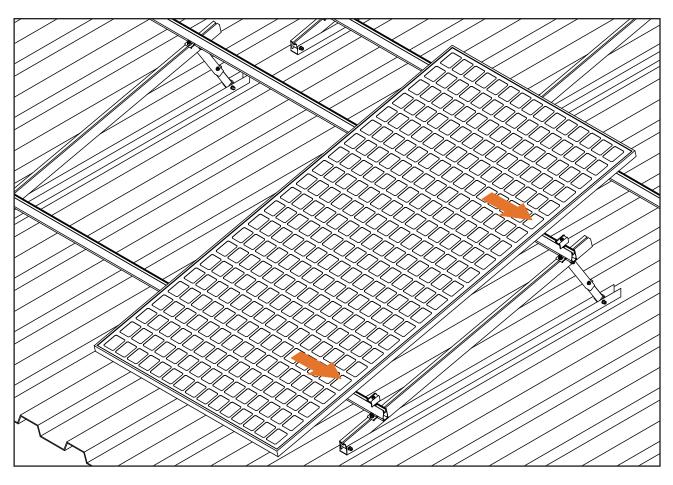

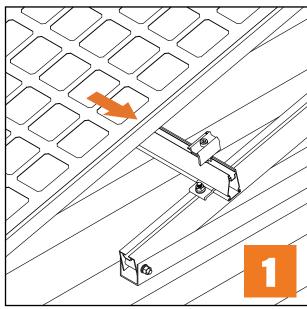


STEP 1Slide the first module into place, lifting it and positioning the end clamps firmly against the module edge.

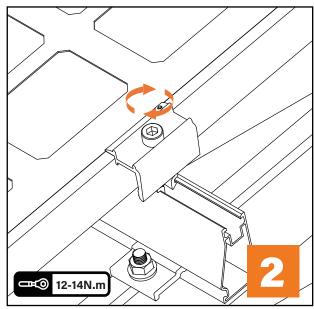


STEP 2
Tighten to required torque (12-14 N.m) ensuring end clamps remain tight and straight against modules edge.




INSTALLING THE INNER CLAMPS ONTO THE MOUNTING RAILS

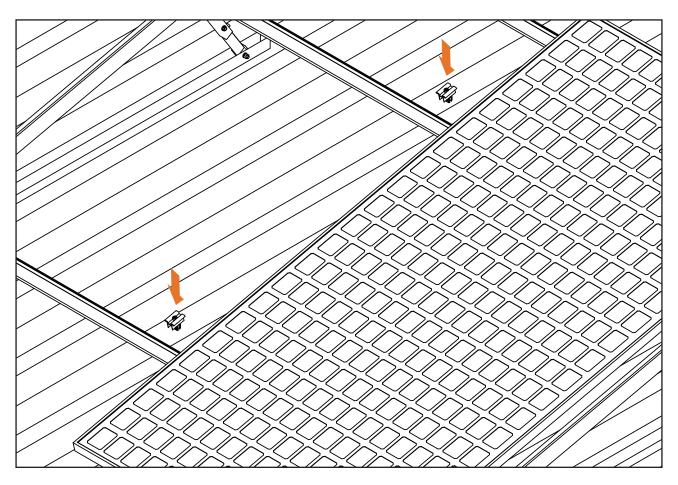

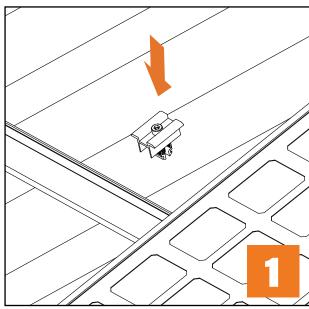


STEP 1Insert the inner clamps into the mounting rail. Ensure they are positioned loosely for easy adjustment.

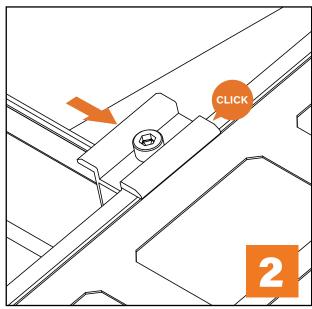


STEP 2
Slide the inner clamps against the edge of the first module.
Note: The inner clamps remain free-standing to facilitate positioning of the second module.




SECOND SOLAR MODULE PLACEMENT AND FIXING

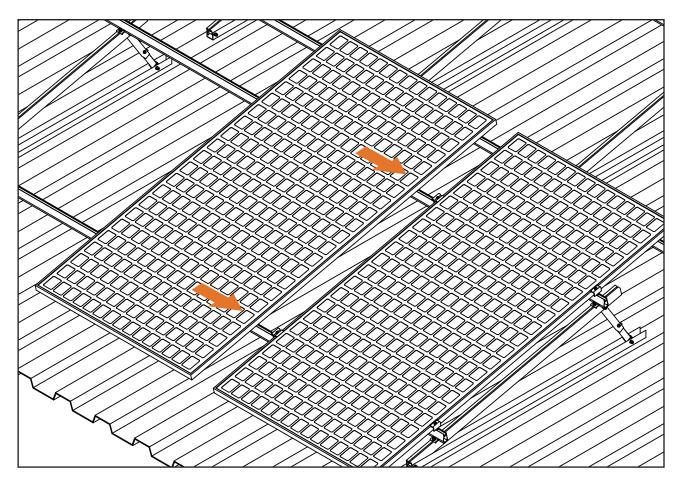

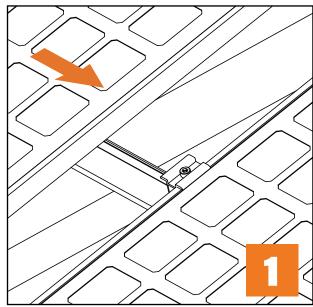


STEP 1Slide the next module towards the inner clamps and align it using a spirit level, set square, or another straight edge.

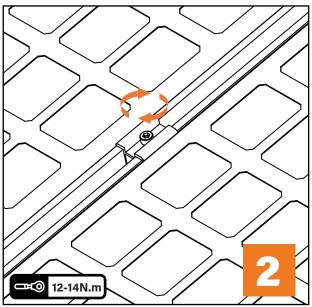

Tighten the inner clamps to the required torque (12–14 N.m), ensuring they remain straight and firmly against the module edge.



INSTALLING THE LAST SOLAR MODULE OF THE ROW

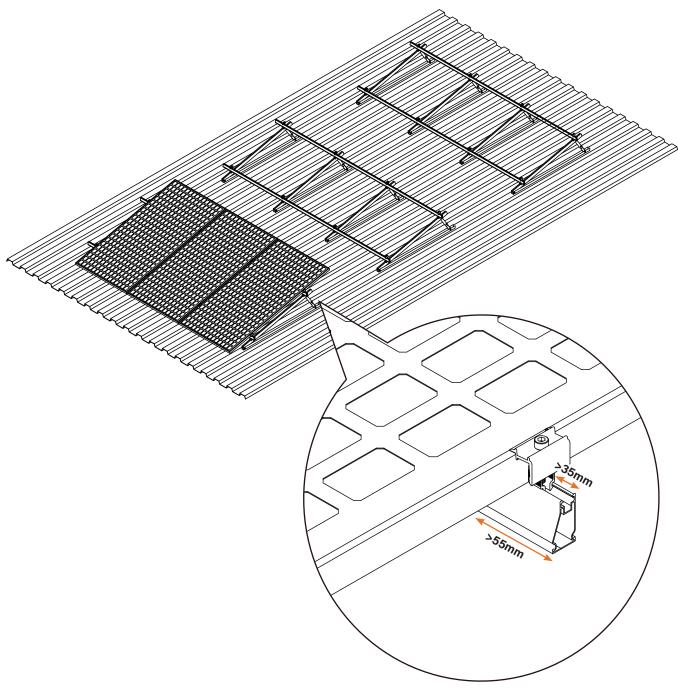


- 1. Place the last solar module on the mounting rails.
- 2. Slide the panel tightly against the last inner clamps, ensure the panels are aligned, and tighten to the recommended torque (12–14 N.m).
- 3. Install the final end clamps into position and tighten.
- (i)

Remember to double check that you have the recommended 35mm of rail past the last end clamp. Repeat on all subsequent rows until complete.



INSTALLING THE NOVA END CAPS

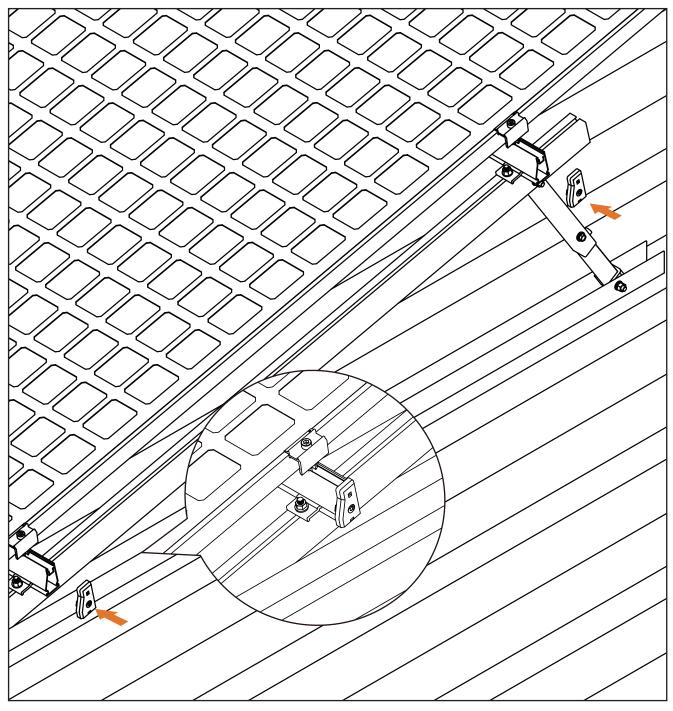


Insert the end caps onto the exposed ends of the mounting rails, ensuring a snug and secure fit.

i This step is optional and serves as an aesthetic enhancement only.



SOLAR MODULE INSTALLATION COMPLETED

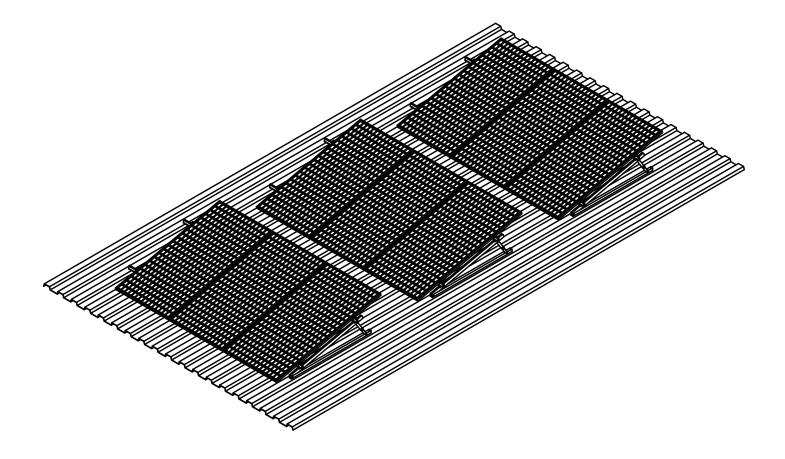



7. NOTE

Date:	
Name/Company:	
Job No:	Phone:











